

Ex. No 5 Use Autopsy to create a case and import evidence

Description

Autopsy is an open-source digital forensics platform used for analyzing and extracting data from digital devices. Here's a step-by-step process on how to use Autopsy for a basic forensic investigation:

Drive link:

https://drive.google.com/drive/u/1/folders/1lISFY7Tqn2L7AjQGhq8vJ8kixc_xTU-v

Download files: 4Dell Latitude CPi.E01, 4Dell Latitude CPi.E02

1. Installation

- **Download and Install:** Autopsy can be downloaded from the official website. Follow the installation instructions based on your operating system (Windows, Linux, or macOS).

2. Starting a New Case

- **Open Autopsy:** Launch the application after installation.
- **Create a New Case:**
 - Click on New Case.
 - Enter the case name and location where the case data will be stored.
 - Fill in the details like the case number, examiner's name, etc., and click Next.

New Case Information

Steps

1. Case Information
2. Optional Information

Case Information


Case Name: hemanth

Base Directory: C:\Users\hemanth\Downloads\ Browse

Case Type: ☒ Single-User ☐ Multi-User

Case data will be stored in the following directory:
C:\Users\hemanth\Downloads\hemanth

< Back Next > Finish Cancel Help

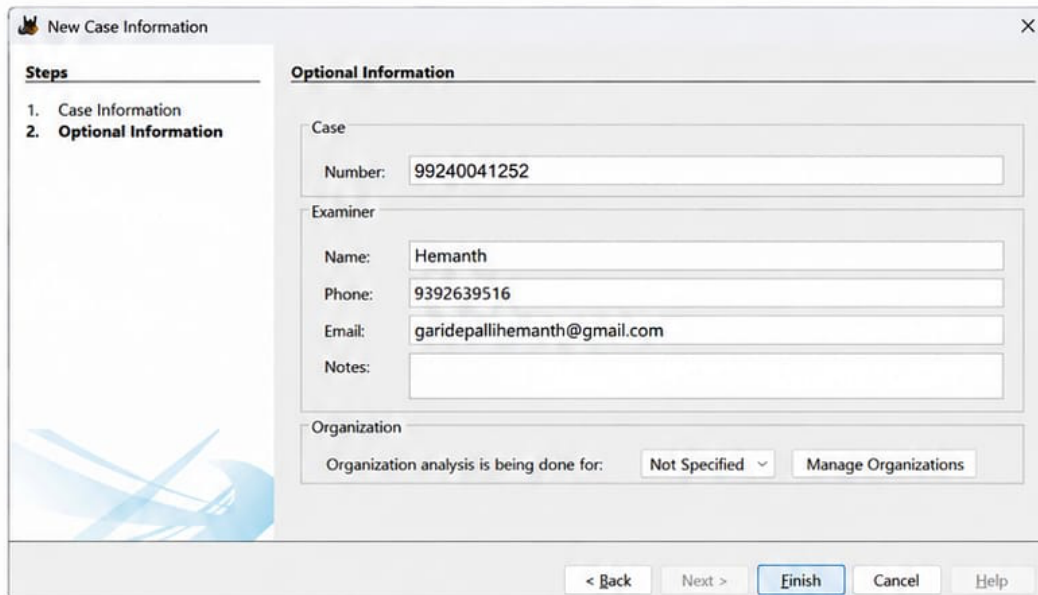

New Case Information

Steps

1. Case Information
2. **Optional Information**

Optional Information

Case

Number: 99240041252

Examiner

Name: Hemanth

Phone: 9392639516

Email: garidepallihemanth@gmail.com

Notes:


Organization

Organization analysis is being done for: Not Specified Manage Organizations

< Back Next > Finish Cancel Help

3. Adding a Data Source

- **CI** 99240041252
9392639516
garidepallihemanth@gmail.com ata source.
- You can add disk images, directories, logical files, or local disks. **Select the Data Source:**
 - Browse to the location of the image file (e.g., .E01, .dd, or .raw), physical disk, or directory you want to analyze.
 - <https://drive.google.com/drive/u/1/folders/1ilSFY7Tqn2L7AjQGhq8vJ8kixcxTU-v>

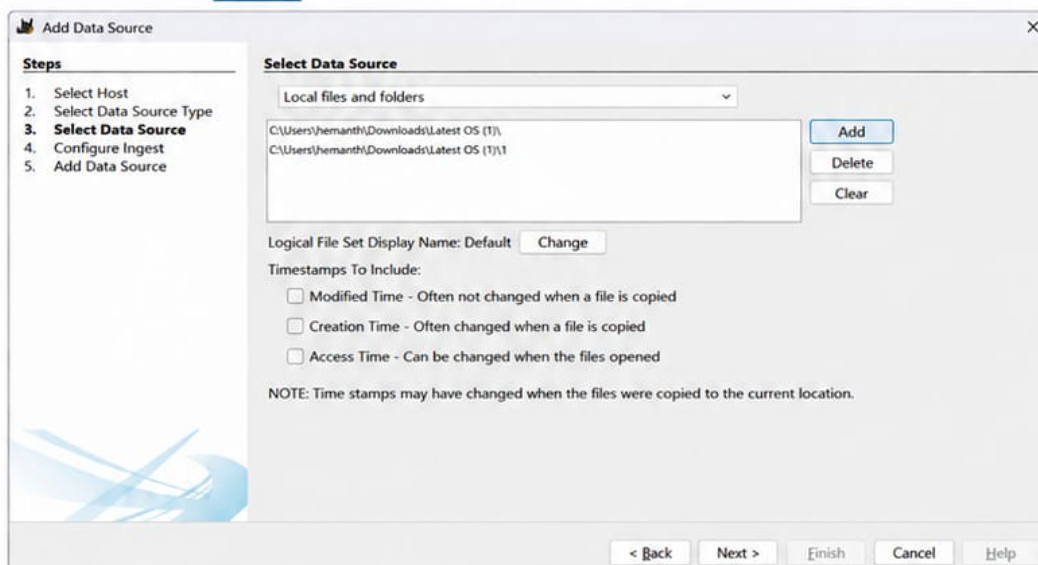

Add Data Source

Steps

1. Select Host
2. Select Data Source Type
3. **Select Data Source**
4. Configure Ingest
5. Add Data Source

Select Data Source

Local files and folders

C:\Users\hemanth\Downloads\Latest OS (T)\
C:\Users\hemanth\Downloads\Latest OS (T)\1

Add
Delete
Clear

Logical File Set Display Name: Default Change

Timestamps To Include:

☐ Modified Time - Often not changed when a file is copied

☐ Creation Time - Often changed when a file is copied

☐ Access Time - Can be changed when the files opened

NOTE: Time stamps may have changed when the files were copied to the current location.

< Back Next > Finish Cancel Help


- **Configure Ingest Modules:**
 - Autopsy allows you to select specific analysis modules such as File Type Identification, Keyword Search, Hash Lookup, etc.
 - You can enable or disable these based on your investigation needs.
- **Start Analysis:** Click Next to start the analysis.

4. Initial Analysis and Overview

- **Ingest Progress:** As Autopsy processes the data source, you'll see the progress in the lower-left corner.
- **Explore the Resulting Artifacts:**
 - Autopsy automatically categorizes findings such as web artifacts, file system metadata, and communication records.
- **Use the Tree Viewer:**
 - On the left pane, you'll see a tree structure where you can explore different aspects like File System, Web History, Email, etc.

5. Detailed Analysis

- **Keyword Search:**
 - You can perform specific keyword searches using the Keyword Search module.
 - Use pre-configured lists or enter custom keywords.
- **File Analysis:**

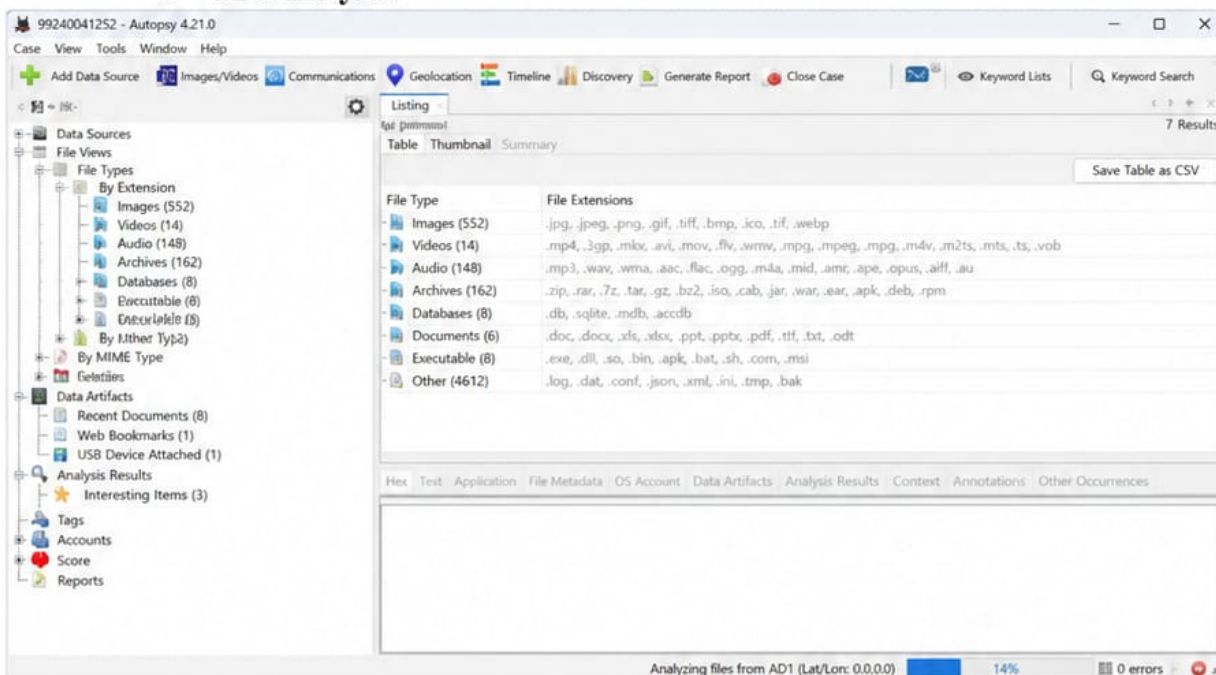

- Navigate through files and folders under the File Types or File System section.
- Open, view, or export files for further examination.
- **Timeline Analysis:**
 - Use the Timeline module to visualize events based on timestamps.
 - This can help track user activity over time.
- **Hash Analysis:**

- Compare file hashes with known databases to identify known good or bad files.

6. Reporting

- **Generate a Report:**


- After analyzing the data, click on Generate Report from the toolbar.
- Choose the type of report (HTML, CSV, Excel, etc.).
- Select which parts of the analysis you want to include in the report.

- **Export Findings:**

- Export individual files or artifacts that you need for your report or further analysis.

- **Final Review:**

- Review the report to ensure it includes all relevant information.
- Save or print the report for use in your case.

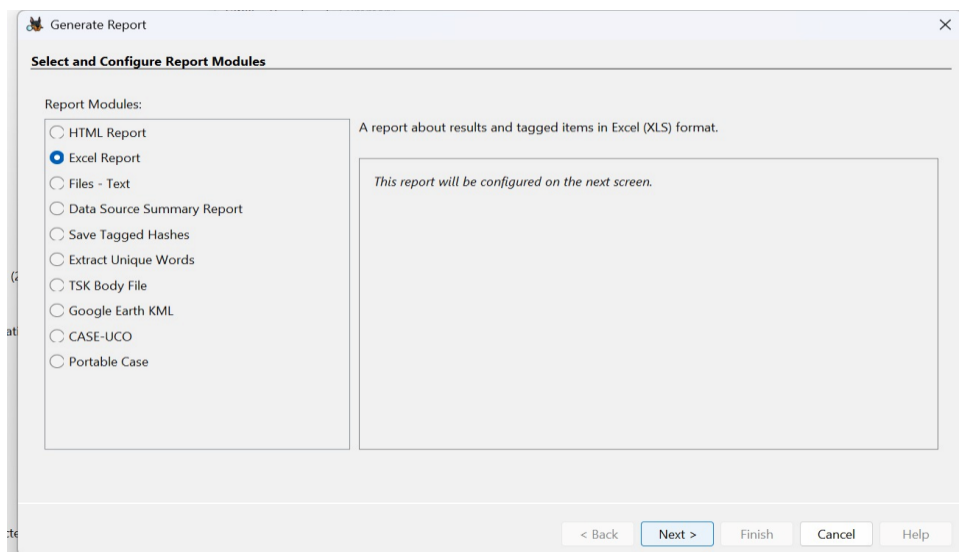

7. Case Closure

- **Close the Case:**

- Once you have completed your investigation, close the case within Autopsy.

- **Archiving:**

- Ensure all data and reports are properly archived according to your organization's policies.

8. Advanced Features (Optional)

- **Custom Ingest Modules:**

- Autopsy allows for custom modules to be added if you need specific analysis tools not included by default.
- **Collaboration:**
 - Autopsy can be configured for multi-user cases if you're working in a team environment.s

